

NOTICE DE MONTAGE “SABOT MOTEUR“

VARADERO 125 2001/2006



Kit de fixation

- 2 colliers Ø28
- 2 colliers Ø30
- 4 entretoises filetées Ø6 L20
- 8 vis BHC 6x10
- 4 rondelles plastique Ø6
- 3 vis BHC 5x15
- 3 écrous freins M 5
- 3 rondelles plastiques Ø5
- 3 rondelles acier Ø5

Montage


- Assemblez les deux parties du sabot avec les 3 vis BHC 5x15, les 3 rondelles plastique, les 3 rondelles acier et les 3 écrous freins M5.
- Positionnez les colliers sur le cadre comme indiqué sur les photos (les colliers Ø 28 servant pour les fixations avant et les colliers Ø30 servant pour les fixations arrière). Ne les serrez pas.
- Mettez en place le sabot sur les fixations (vis BHC 6x10 et les rondelles plastiques). Centrez-le en modifiant la position des colliers. Une fois bien en place, serrez toutes les fixations sans trop forcer sur les vis en contact avec la pièce plastique pour ne pas l'endommager. Vérifiez que l'échappement n'est pas en contact avec le sabot.

« ATTENTION »

- * Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'attendre un mois afin d'obtenir une polymérisation complète du vernis.
- * Tout accessoire monté ne sera plus considéré comme neuf et ne sera ni repris ni échangé.
- * Les accessoires Ermamax sont conçus pour des montes d'origine. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.
- * En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermamax peuvent nécessiter des ajustements lors de la fixation.
- * Les sabots ne seront ni repris ni échangés en cas de frottement lors d'une conduite "sportive", ou lors du franchissement de trottoirs, dos d'âne ... Le montage des accessoires Ermamax est prévu pour une utilisation routière normale.
- * Déplacer toute durite pouvant couler à l'intérieur des sabots. Toute casse due à des écoulements de produits corrosifs n'est pas garantie.
- * Les vis en aluminium sont garanties jusqu'à 6 Nm par nos fournisseurs. Attention aux serrages excessifs qui pourraient abîmer ou casser les vis.

FITTING INSTRUCTIONS “BELLY PAN“

VARADERO 125 2001/2006

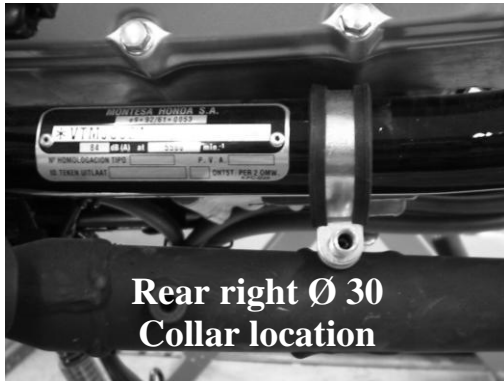

Fitting kit

- 2 Ø28 collars
- 2 Ø30 collars
- 4 Ø6 L20 threaded spacers
- 8 6x10 BHc screws
- 4 Ø6 plastic washers
- 3 5x15 BHc screws
- 3 M5 nylstop nuts
- 3 Ø5 plastic washers
- 3 Ø5 steel washers

Assembly

- Assemble the 2 parts of the belly pan with 3 Ø5×15 screws, the 3 Ø5 steel washers, the 3 Ø5 plastic washers and the 3 M5 nylstop nuts.
- Position collars on the frame as indicated on photos (Ø28 collars serving for the front fixation and Ø30 collars for the rear fixations). Do not tighten them.
- Place the belly pan on the fixations(6×10 BHc screws and plastic washers), centre it by moving collars location. Once everything is well placed tighten all the fixations without forcing too much on screws in touch with the plastic not to damage it. Check that the belly pan is well clear of the exhaust pipes.

“WARNING”

* Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, to wait one month to obtain a complete polymerization of varnish.

* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.

* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.

* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjustings to fit.

* Belly pans will be neither retaken nor exchanged in case of rubbing during a “sports” driving, or during the clearing of pavements, uneven road surfaces ... The fitting of Ermax accessories is planned for a **normal road use**.

* Move hoses so that they do not fall inside the belly pans. Any deterioration due to flows of corrosive products is not guaranteed.

* Aluminium screws are guaranteed until 6 Nm by our suppliers. Care to excessive clampings which may damage or break screws.