

### **Kit de fixation**

- 2 vis BHc 8x25
- 2 entretoises plastique Ø8 L : 5mm
- 50 cm de joint caoutchouc
- 2 entretoises plastique Ø8 L : 10mm
- 2 grilles alu 5 cm x 20 cm
- 1 paire de clignotants n°11 maxi courbé

### **Montage**

- Démontez les caches d'origine, débranchez les clignotants (pour cela soulevez le réservoir et démontez le filtre à air).
- Collez la moitié du joint caoutchouc sur chaque écope, sur le bord en contact avec le cadre.
- Montez les écopes comme indiqué sur la photo, en utilisant les vis d'origine pour l'écope droite de la moto et en utilisant les vis fournies et les entretoises pour le côté gauche de la moto.
- Branchez les clignotants et remontez le filtre à air et le réservoir.

**\* Les grilles alu se placent, accessoirement, au niveau des entrées d'air, avec du silicone.**

#### **« ATTENTION »**

\* Les pièces peintes et vernies ne sont pas garanties contre les lavages vapeur « haute pression » ou les produits nettoyants agressifs qui peuvent les endommager et décoller le vernis. Nous conseillons d'ailleurs, d'après les données techniques de nos fournisseurs en peinture, d'**attendre un mois** afin d'obtenir une polymérisation complète du vernis.

\* Tout accessoire monté ne sera plus considéré comme neuf et ne sera **ni repris ni échangé**.


\* Les accessoires Ermax sont conçus pour des **montes d'origine**. Ils ne seront pas garantis s'ils sont utilisés dans d'autres conditions.

\* En raison des tolérances de fabrication des véhicules, indépendantes de notre volonté, certains produits Ermax peuvent nécessiter des ajustements lors de la fixation.

\* Les vis en aluminium sont garanties jusqu'à 6 Nm par nos fournisseurs. Attention aux serrages excessifs qui pourraient abîmer ou casser les vis.

**FITTING INSTRUCTIONS**  
**« RADIATOR COVERS »**

***1050 SPEED TRIPLE 2005/2007***

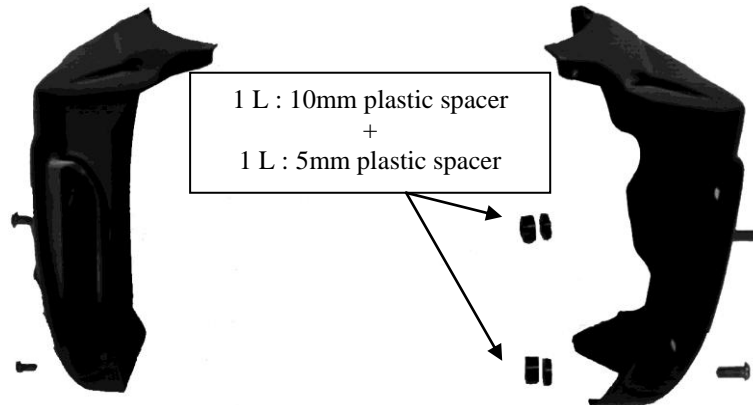

**Fitting kit**

- 2 BHc 8x25 screws
- 2 Ø8 L: 5mm plastic spacers
- 50 cm rubber seal
- 2 Ø8 L: 10mm plastic spacers
- 2 grilles alu 5 cm x 20 cm
- 1 pair of n°11 maxi curved indicators

**Assembly**

- Remove the original covers; disconnect the indicators (lift up the gas tank and take off the air filter).
- Stick the half of the rubber seal on both scoops, on the edges that touch the frame.
- Place the scoops as showed on photos by using the original screws for the right- handside scoop and thanks to the provided screws and spacers for the hand-side of the motorbike.
- Connect the indicators and replace the air filter and gas cap.

**\* Aluminium nettings can be put in option at the air intakes, with silicone.**

**« CAUTION »**

\* Painted and varnished parts are not guaranteed against high pressure steam washes or aggressive cleaning products which can damage them and unstuck the varnish. We advise moreover, according to the technical data of our painting suppliers, **to wait one month** to obtain a complete polymerization of varnish.

\* Accessories gone up on the motorbike will not be any more considered as new and will be **neither retaken nor exchanged**.

\* Ermax accessories are foreseen for **original equipments**. They will not be guaranteed if they are used in others conditions.

\* Due to vehicles made tolerances, beyond our control, some Ermax products might need adjusting to fit.

\* Aluminium screws are guaranteed until 6 Nm by our suppliers. Care to excessive clampings which may damage or break screws.