


pour carburateurs
PE26 et 28 mm
PWK28 mm

46-

Lettre	Angle	Longueur L1	Diamètre ø d
A	1° 00'	18.20	2.365
B	1° 15'	18.65	2.375
C	1° 34'	20.00	2.385
D	1° 45'	20.45	2.395
E	2° 00'	21.80	2.405
F	2° 15'	22.25	2.415
G	2° 26'	23.60	2.425
H	2° 45'	24.05	2.435
J	3° 00'	25.40	2.445
K	3° 15'	25.85	2.455
L	3° 33'	27.20	2.465
M	3° 50'	27.65	2.475
N	4° 00'	29.00	2.485
P			2.495
Q			2.505
R			2.515
S			2.525
T			2.535
U			2.545
V			2.555
W			2.565
X			2.575
Y			2.585
Z			2.595

Aiguilles

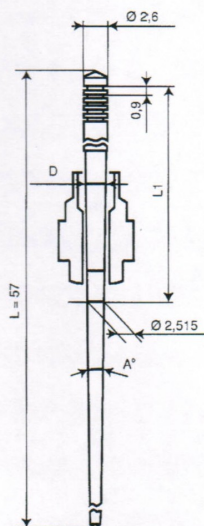

Comment commander vos aiguilles
Construisez vos références

Ex = **46 - J J H**


3°00' 25.40 2.435
colonne colonne colonne
Angle Longueur Diamètre

pour carburateurs
PJ et PE34, 36 et 38 mm
PWK33, 35, 36,38 et 39 mm
PWM38

48-

Lettre	Angle	Longueur L1	Diamètre ø d
A	1° 00'	34.55	2.605
B	1° 15'	35.00	2.615
C	1° 34'	36.35	2.625
D	1° 45'	36.80	2.635
E	2° 00'	38.15	2.645
F	2° 15'	38.60	2.655
G	2° 26'	39.95	2.665
H	2° 45'	40.40	2.675
J	3° 00'	41.75	2.685
K	3° 15'	42.20	2.695
L	3° 33'	43.55	2.705
M	3° 50'	44.00	2.715
N	4° 00'	45.35	2.725
P			2.735
Q			2.745
R			2.755
S			2.765
T			2.775
U			2.785
V			2.795
W			2.805
X			2.815
Y			2.825
Z			2.835

Aiguilles

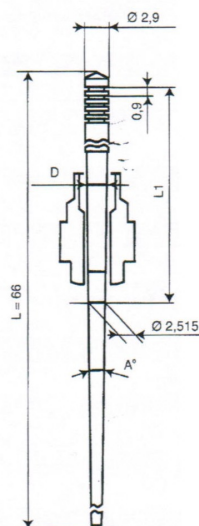

Comment commander vos aiguilles
Construisez vos références

Ex = **48 - D G J**

1°45' 39.95 2.685
colonne colonne colonne
Angle Longueur Diamètre